



**squadrasportiva**  
by **NOVITEC**



# Mounting Guidelines



**Novitec Sport Shifter**



**abarth**sportiva



**alfa**sportiva




**fiat**sportiva




squadrasportiva  
by NOVITEC

1

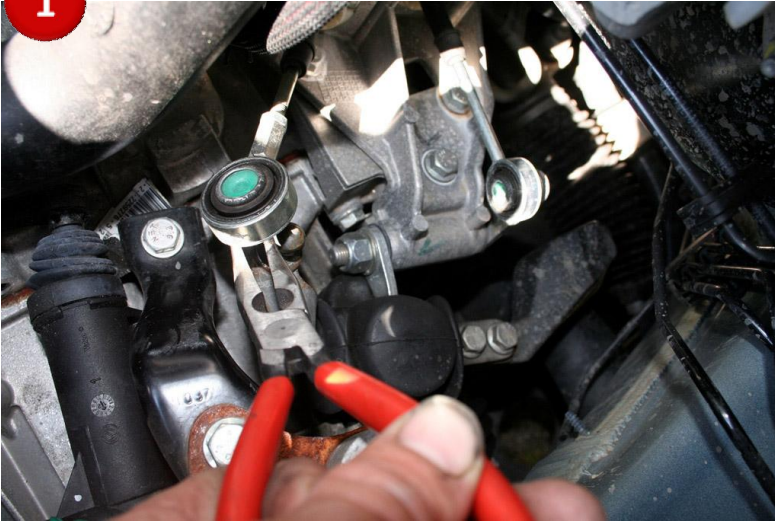

Unlock shift cable from ball joint.

2

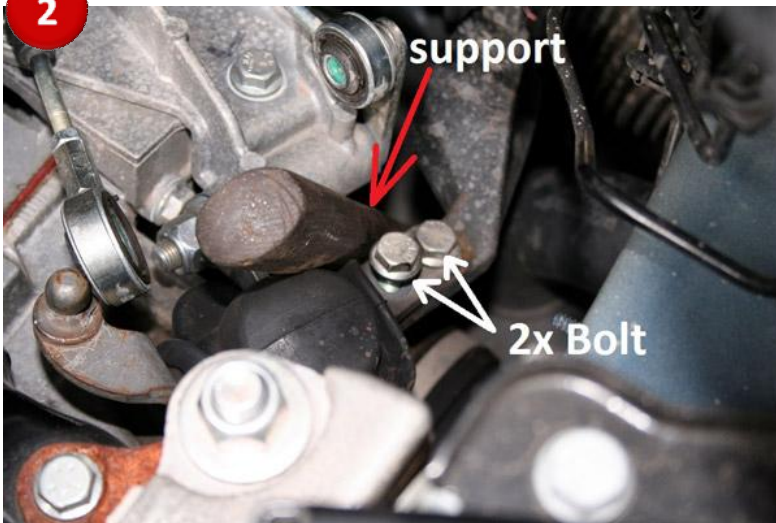

Remove the two M8 bolts.

**Importantant:**

Support the shifter with a piece of wood so no forces reach the gearbox

3



Fit the Sport shifter now on the OEM shifter.


**Importantant:**

Support the shifter again while tightening the 2 M8 bolts so no forces reach the inner gearbox.



squadrasportiva  
by NOVITEC

4

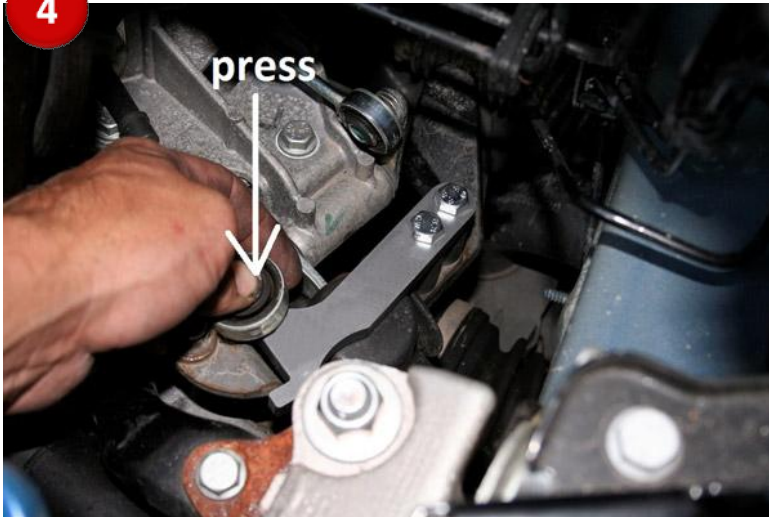

5

